

Firmware Update/Re-installation instructions for PARD DS35 models.

1. Save the FWPDDS35.zip file you have downloaded somewhere accessible on your Computer/Laptop, i.e.: Desktop, Downloads etc. and unzip the file and grab the FWPDDS35.bin file and save somewhere accessible where you can remember.
2. Use a compatible Micro SD card not exceeding 128GB.
3. Insert the Micro SD Card into the DS35 unit and format it within the DS35 unit. Navigate to and select "Format" from the menu options. Select "OK" and press the OK button.
4. Once the Format is complete, power off the unit with a long press (make sure you do not put the unit into sleep mode). Eject and remove the Micro SD Card from the unit and copy the FWPDDS35.bin file you saved onto the root of the Micro SD Card from your computer – there should be no other files or folders on the Micro SD Card.
5. Insert the Micro SD Card into the DS35 unit again and turn on the power, the power indicator should flash for a few seconds while the file is loaded into the DS35, wait until this stop and after a few seconds the PARD introduction will appear.
6. Turn off the DS35 fully, eject and remove the Micro SD Card.
7. Use your Computer/Laptop to delete the firmware update file from the Micro SD Card, otherwise the unit will update the firmware every time you power on your DS35 unit with the Micro SD Card inserted and with that delete all the settings etc. you have stored.
8. With the firmware update file removed, you can safely insert the Micro SD Card back into the unit, and it is ready for use.

Please note:

- For use with PARD DS35 Models only.
- **IMPORTANT:** Use of this file on any other PARD Model will damage (brick) the unit and VOID any warranty.
- With any firmware update/re-installation, all settings, zeroing etc. will be reset to factory defaults. With that in mind please take note of any specific settings etc. you may have stored so that reconfiguring your unit after the update becomes less cumbersome.